



WDS




SF-4957

PowRlock Self Bleed Booster Reservoir Assembly (SF-4957)

PowRlock Self Bleed Booster Reservoir Assembly

Note: Fit to side port of all SF-2600 and SF-7000 series boosters by fitting 3/8" BSP threaded 'Tee' directly into booster outlet port.

When fitting into the 1/4" BSP port of SF-2300 and SF-235 mini boosters a standard no SF-4108 male/female adaptor must be fitted to the 'Tee' first.

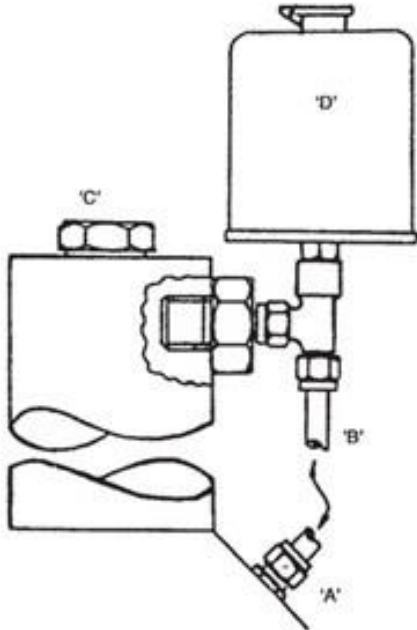

Fitting Instructions

1. Fitting bleed valve as shown, using the existing bonded washers. Use 1/8" x 1/8" BSP adaptor for intensifiers with 1/8" BSP outlet.
2. Remove fitting at 'A' and replace with adaptor supplied (Note: The adaptor has been fitted into top of tee piece for ease of packaging).
3. Fit nylon tube 'B' (cut to suit).
4. Fill intensifier with oil through 'C' and refit plug.
5. Fill reservoir 'D' 1/2 full and operate system.
6. The oil level in reservoir 'D' will drop as air in the system escapes.
7. When the reservoir level stabilises, fill to 3/4 full.
8. The booster is now ready for use but the remainder of the system should be bled as

NOTE: Fit to side port of all SF-2600 and SF-7000 series boosters by fitting the 1/8" BSP threaded 'Tee' directly into booster outlet port. When fitting into the 1/8" BSP port of SF-2300 and SF-2350 mini boosters a standard no. SF-4108 male/female adaptor must be fitted to the 'Tee' first.

2 Sizes

WDS NO.	Description	Weight
SF-4957	Self Bleed Booster Reservoir Assembly	0.35
SF-4921	Air Silencer 1/8 BSP	0.002

Registered in England No 6819551 | VAT Reg No: GB 945 9861 64